

# artesia

## FUN-1



## Owner's Manual

V<sub>irgin</sub> M<sub>usical</sub> I<sub>nstruments</sub>

# Digital Piano

## Precaution

Thank you for purchasing this digital instrument. For perfect operation and security, please read the manual carefully and keep it for future reference.

## Safety Precautions



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the product.

## Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings and install in accordance with the manufacturer's instructions.
- 8) Do not install near the heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid



(Figure 1)

injury from tip-over(Figure 1).

13) Unplug this apparatus during lightning storms or when unused for a long periods fo time.

 
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally ,or has been dropped.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**CAUTION:** Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

# Content

<b>Top Panel Controls</b> .....	2
<b>Rear Panel Controls</b> .....	2
<b>Power Supply</b> .....	2
<b>Power</b> .....	2
<b>Volume</b> .....	2
<b>Aux In</b> .....	3
<b>Headphone</b> .....	3
<b>Pedal</b> .....	3
<b>USB to Host</b> .....	3
<b>Voice Selecting</b> .....	4
<b>Demo Song</b> .....	4
<b>Touch</b> .....	4
<b>Assembly Instructions</b> .....	5
<b>Additional Information</b> .....	5

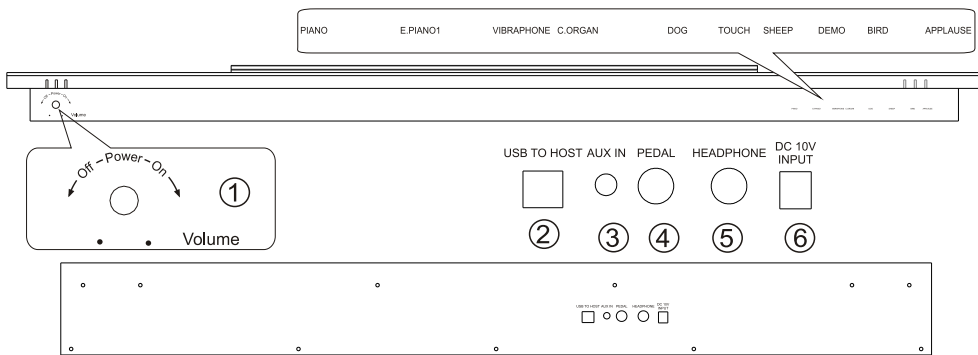

## Top Panel Controls

 
1. Power On/Off(VOLUME)

## Rear Panel Controls

- |                     |                      |
|---------------------|----------------------|
| 2. USB TO HOST Jack | 5. Headphone Jack    |
| 3. Aux In Jack      | 6. DC 10V Input Jack |
| 4. Pedal Jack       |                      |


## Power Supply

Plug the DC output cable from the Power adaptor into the DC IN jack on the rear panel of your instrument, then plug the Power adaptor into a convenient wall AC power socket.

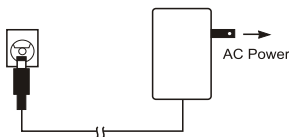

## Power

 With the piano assembled and plugged into a power outlet, adjust the [Power On/Off(VOLUME)] knob to turn on or turn off the piano.




## Volume

You can adjust the volume by turning the [Power On/Off(Volume)] knob to the right or to the left.


## Aux In

 Connect the external sound system to the [AUX IN] jack. The audio signal from the external sound system can be mixed with the sound of your piano. This function is convenient when you want to play along with your favorite song.




## Headphone

 A standard pair of stereo headphones can be plugged into the rear-panel [Headphone] jack for private practice or late-night playing. The internal speaker system is automatically shut off when a pair of headphones is plugged into the [Headphone] jack.

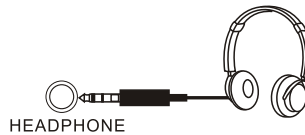


## Pedal

 A foot switch can be plugged into the rear-panel [PEDAL] jack. The Pedal is a damper pedal controlling sustain function. To press the pedal you can sustain the notes after the keys are released.




## USB to Host

 You may connect your tablet, laptop or desktop computer to your piano. This will allow the player to take lessons or play music games from the appropriate software or App.

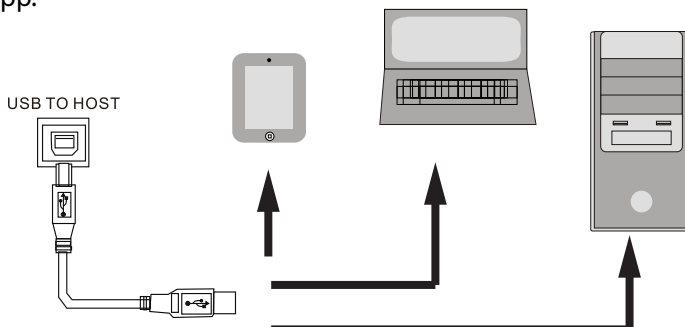


## Voice Selecting

 Hold down the first 3 keys (two white and one black) and then press one of the top 8 white keys to select an instrument voice. For further questions or ideas please visit [virginmusicalinstruments.com](http://virginmusicalinstruments.com).

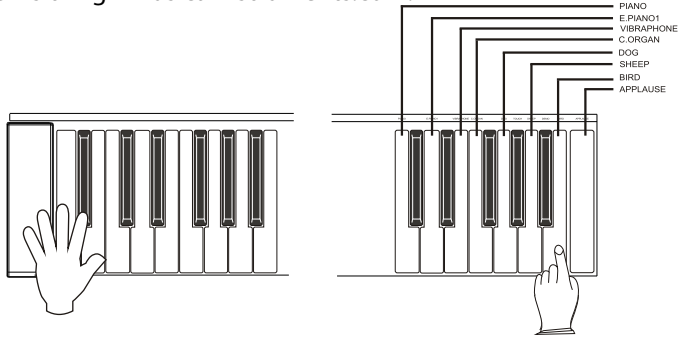


## Demo Song

 Hold down the first 3 keys (two white and one black) and then press the top black key. The demo song will start to play. To stop the demo song, hold the first 3 keys simultaneously and then press the top black key again.

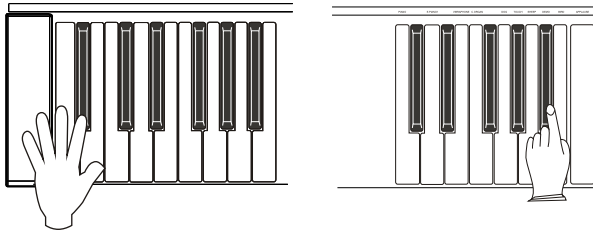

## Piano Key Touch Sensitivity

 Hold down the first 3 keys (two white and one black) and then press the second to the top black key. Touch function will be turned off. To turn on the Touch function, hold the first 3 keys and then press the second to the top black key again. (Default: On)

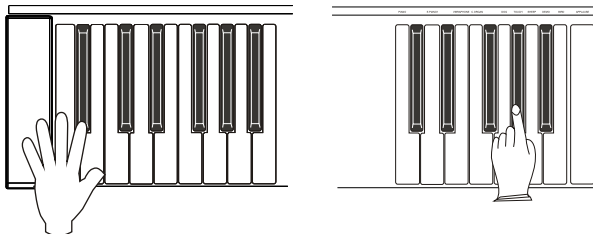



## **WARNING :**

This instrument is intended to be assembled by adult.

WARNING: Not suitable for children under 36 months. Small Parts. Choking hazard.

### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.



artesia

Virgin Musical Instrument Company INC

P O Box 2908

La Mesa, CA 91943

PH: 619 244-0006

E-mail: [info@virginmusicalinstruments.com](mailto:info@virginmusicalinstruments.com)

[Virginmusicalinstrumentscompany.com](http://Virginmusicalinstrumentscompany.com)